

EasiSolv 701 Screen Wash & Stain Remover with Degreasers

Product Description:

EasiSolv™ 701 Screen Wash & Stain Remover is an

environmentally approved, 100% active, low odor, extremely quick penetrating and fast acting solvent designed to dissolve and clean all types of screen printable inks, adhesives, clear coatings and stains from printing mesh. EasiSolv 701 also works quickly as a stain remover with added degreasers causing no damage to printing mesh.

Physical & Chemical Data:

Appearance & Odor:	Clear amber liquid with mild odor.
Specific Gravity:	1.01 @ 20 °C / 68 °F
Vapor Pressure:	0.08 mm Hg @ 20 °C / 68 °F
Vapor Density:	Heavier than air
Boiling Point:	196 °C / 385 °F
рН:	Neutral
VOC:	910 grams/liter
Flash Point:	196 °F / 91 °C

Special features:

- EasiSolv 701 dissolves all inks and ink stains quickly, allowing mesh to be rinsed clean with water.
- EasiSolv 701 degreases as it dissolves inks, eliminating the additional step and expense of degreasing chemicals.
- EasiSolv 701 is a low odor product, providing a more pleasant environment for employees.
- EasiSolv 701 is non-flammable (flash point of 196°F) which makes it safer for handling, storage and rag disposal than conventional screen washes.
- EasiSolv 701 contains low-foam, biodegradable detergents which contribute to superior ink and stain removal, while providing complete rinsability with water.
- EasiSolv 701 is not SARA (Superfund Amendments Reauthorization Act) reportable which requires less solvent monitoring and paperwork.
- EasiSolv 701 may be applied manually or recirculated through the EasiFlo[™] System, or in an enclosed, automatic screen washing system, providing superior product life and economy.
- EasiSolv 701 may be applied to a wet screen for use as a stain remover, without causing damage to the mesh.

Application for use as a screen wash:

- Scrape excess ink from screen.
- Apply EasiSolv 701 to the (well) ink and print side of the screen. Scrub if necessary.
- Squeegee excess off screen.
- Using a good high pressure washer, spray rinse the screen starting at the bottom of the well side and work up. Give good attention to the image area of the screen. Rinse the print side of the screen.
- Apply an Easiway Systems approved emulsion/stencil remover. The screen will now be ready for reuse. (no need to use an additional degreaser)
- If stubborn stains remain, apply EasiSolv 701 as a stain remover and high pressure rinse.

Application for use as a stain remover with degreasers:

- Remove all ink and emulsion from screen.
- Apply stain remover to the (well) ink and print side of the screen, scrub.
- High pressure rinse both sides of screen, followed by a slow or flood rinse to activate degreasing agents. Screens are then cleaned and ready for use.