MULTI-WASH (APEO / NPEO FREE) Multi-Purpose Screen Wash

GENERAL DESCRIPTION

MULTI-WASH is a water soluble ink degradent. It is highly effective on plastisol, multipurpose (solvent based), poster, UV, and vinyl inks. MULTI-WASH will protect the fabric from deep stains or ghosting from the image print. This makes it much easier when complete reclamation of the screen is necessary.

MULTI-WASH can be used in a wide variety of innovative cleaning processes ranging from re-circulation machines, dip tanks, immersion cleaning processes, and automatic reclaiming machines. It can also be applied manually with a scrub pad, spray bottle, or pneumatic pump systems.


MULTI-WASH is also an excellent plastisol ink haze (ghost) remover. hazardous (non-corrosive) and aggressively removes image stains from the mesh.

ADVANTAGES

- · Low Odor
- High Solvency
- · High load capacity to reduce usage
- · High flash point / Non-flammable
- · Non-Hazardous
- Mesh safe
- Multiple applications
- Does NOT Contain Alkylphenol Ethoxylates (APEO) / Nonylphenol Ethoxylates (NPEO)

APPLICATIONS

Always card excessive ink from screen. Use one of the following applications.

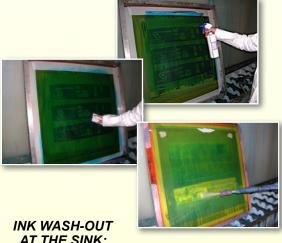

AT THE SINK:

Card excessive ink from the screen. Apply MULTI-WASH to ink side of screen. Use a non-abrasive scrub brush or pad to agitate ink on both sides of screen. Finally, rinse away all residue away using high pressure water.

Haze Remover:

After ink and emulsion has been removed, spray MULTI-WASH on both sides of the screen. Scrub screen both sides with a non-abrasive brush or pad. Allow product to dwell a few minutes (depending on severity of stain). High pressure rinse screen working from bottom and moving upwards.

> 4 x 4 Stainless Steel Recirculating Booth Click here for more details.

RECIRCULATING WASH:

Card excessive ink from the screen. This product can be continuously recirculated until product becomes too heavily soiled with solids. Used product may be filtered and reused.

Packaging

1 gallon 5 gallon pail 55 gallon drum

Quick Tip:

Always pressure wash screen from the bottom and work upwards.

This will prevent ink from locking back onto the mesh when coming in contact with the rinse water.

